

Variable flow Smoke System



Features;

Adjustable flow

Fail Safe shut off; any receiver signal above or below the normal range will turn off the system

Fail safe start up; if the radio system is turned on with the smoke control in any position but off position, it will not start pumping until it reads an "off" signal first

No drain smoke battery; the battery gets electrically insulated when the system is in the "off" position

Operation:

The Jet Central smoke system is a "plug and play" device; just connect it to a spare channel in the receiver, and then to a 6v to 7.4v battery, then to a solenoid valve included

Refer to the drawing on the opposite side for connections and installation

Safety:

Please remember to program a "fail safe" in your radio system to turn the system OFF in case of a signal lost condition, this is a must in 2.4 Radio systems

This system has an Electronic Radio frequency suppressor but it is wise to install it at least at 1" (25mm) from the receiver or receiver satellite antennas

Contains:

1 Smoke pump, 1 Manual Festo shut off valve, 1 "Y" Festo connector, 2 Smoke nozzles, 4 Feet of clear tubing.